



75 W. Baseline Road,  
Suite D44  
Gilbert, AZ 85233  
(480) 926-0022

# PACKAGING ASSEMBLY INSTRUCTIONS

Beta Bottle

**Package: Beta Bottle    Issue Date: 07/21/2014    Revision: F**


NO. / CASE	LIST OF COMPONENTS	CONFIGURATION	SPEC / PART #
4	Berry 38-439 A Acid Closures with Foam Liner (or)	A & B	500093
4	Berry 38-439 A Acid Vented Closures with Zitex Liner	A & B	500094
4	9 Pint Beta Bottles with 38-439 Neck Finish and Handle	A & B	1719875
(1)	Regular Slotted Corrugated Container, Pre-assembled	A & B	507089
(1) Roll	2" Clear Pressure Sensitive Tape (Scotch 3M Packaging Tape)	A & B	
Adhesive	H.B. Fuller Hot Melt Adhesive PHC-9200	A	


PACKAGING CONFIGURATIONS:	Case Sealing Method
Configuration A: 4 x 9 Pint Bottles	Top: 2" Clear Pressure Sensitive Tape Bottom: H.B. Fuller Hot Melt Adhesive PHC-9200
Configuration B: 4 x 9 Pint Bottles	Top: 2" Clear Pressure Sensitive Tape Bottom: 2" Clear Pressure Sensitive Tape

**ASSEMBLY INSTRUCTIONS:**  
Note: Refer to component list above. Examine all parts for defects. Once you have determined that this packaging is free from defects then follow these instructions for package assembly.


1. Apply threaded closures to bottles with an application torque of 35 to 50 in-lbs using an appropriate closing tool.
2. For Configuration A, place four (4) bottles into a pre-assembled carton with the bottle closures facing upward.
3. Tape the top flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
4. For Configuration B, fold in two opposite bottoms flaps of carton. Then fold in the remaining two adjacent bottom flaps making sure that the exposed flaps display the Box Maker's Certificate or the Guarantee Stamp.
5. Tape the bottom flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
6. Then place the four (4) bottles in the carton with the bottle closures facing upward.
7. Tape the top flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
8. Apply product labels and DOT hazard warning labels as required by work order instructions. Do not cover up any UN markings with labels or tape of any kind.

Configuration  
A & B

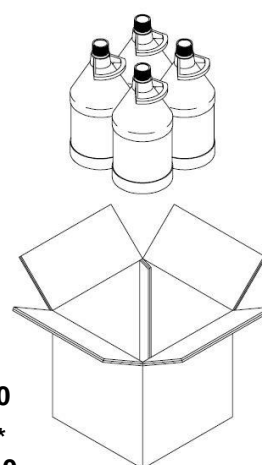





**4G/X23.2/S/\*\***  
**USA/+CC7640**



**4G/Y33.8/S/\*\***  
**USA/+CC7640**



**4G/Y32.3/S/\*\***  
**USA/+CM0083**



**4G/Y21.4/S/\*\***  
**USA/+CC8142**

\*\* (Year of Manufacture)