



75 W. Baseline Road,
Suite D44
Gilbert, AZ 85233
(480) 926-0022

**PACKAGING ASSEMBLY
INSTRUCTIONS**
One Gallon 130 gram bottle

**Package: One Gallon 130 gram bottle Issue Date: March 25, 2022 Rev: F Cert# +CC8078
4 x One Gallon 130 gram Plastic Bottle Packaging**

NO. / CASE	LIST OF COMPONENTS	CONFIGURATION	SPEC / PART #
4	Hoffer 38-400 mm Tamper Evident Drop Lock Closure OR	A & B	356808
4	Berry Plastics 38-400 Ribbed Closure	A & B	18440
4	130 gram Bottles with 38-400 T/E Neck Finish	A & B	1757820 8085 0300 0234
(1)	Regular Slotted Corrugated Container, Pre-assembled	A & B	733744
(1) Roll	2" Clear Pressure Sensitive Tape (Scotch 3M Packaging Tape)	A & B	
Adhesive	H.B. Fuller Hot Melt Adhesive PHC-9200	A	



PACKAGING CONFIGURATIONS:	Case Sealing Method
Configuration A: 4 X 130 gram Bottles	Top: 2" Clear Pressure Sensitive Tape Bottom: Glued
Configuration B: 4 X 130 gram Bottles	Top: 2" Clear Pressure Sensitive Tape Bottom: 2" Clear Pressure Sensitive Tape

ASSEMBLY INSTRUCTIONS:

Note: Refer to component list above. Examine all parts for defects. Once you have determined that this packaging is free from defects then follow these instructions for package assembly.

1. Apply threaded closure to bottle with an application torque of 20 to 26 in/lbs using an appropriate closing tool.
2. For Configuration A, place four (4) bottles into a pre-assembled carton with the bottle closures facing upward.
3. Tape the tops closed with 2" pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
4. For Configuration B, fold in two opposite bottoms flaps of carton. Then fold in the remaining two adjacent bottom flaps making sure that the exposed flaps display the Box Maker's Certificate or the Guarantee Stamp.
5. Tape the bottom flaps closed with 2" pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
6. Then place four (4) bottles in the carton with the bottle closures facing upward.
7. Tape the top flaps closed with 2" clear pressure sensitive tape. Center the tape over the middle seam formed by the flaps being folded together. The length of the tape should be such that there is a 2" extension on each end.
8. Apply product labels and DOT hazard warning labels as required by work order instructions. Do not cover up any UN markings with labels or tape of any kind.

Configuration
A & B

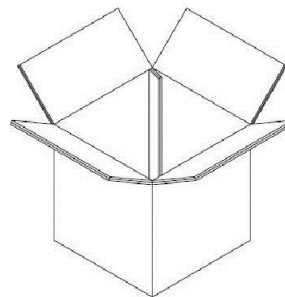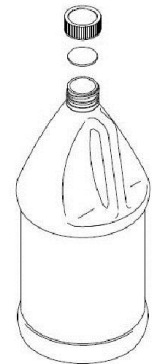

4G/Y21.91/S/
USA+CC8078**

**** (Year of Manufacture)**